Fritz!Box 7583 VDSL uppseting



GG: Vit skulu gera vart við, at Føroya Tele hevur sjálvvirkandi rættindi at umsita hesa eindina. Hetta merkir, at vit kunnu tillaga eindina til tørvin hjá einstaka kundanum, uppstiga og rætta møguligar feilir á eindini v.m.

Víst verður annars til viðskiftatreytirnar fyri breiðbandi hjá Føroya Tele.

Fritz!Box 7583 er uppsetast til VDSL haldini, sum eru allar ferðir hægri enn 20/2Mbps. Set routaran til sum víst niðanfyri og virkar internetið ikki eftir 15 minuttir, skal tú fylgja vegleiðingini á síðu 3.



Loyniorð

- GG! Vit viðmæla altíð at kundar okkara velja eitt nýtt loyniorð til umsiting av beinaranum og eitt nýtt til WiFi(Tráðleyst), heldur enn at brúka tað sum stendur á lepanum á baksíðuni á beinaranum.
- Eitt gott og trygt loyniorð inniheldur: Minst 12 tekin. Smáar og stórar bókstavir. Tøl og sertekin.
- Fleiri góð ráð til loyniorð eru at síggja á <u>https://www.kt-trygd.fo/god-rad/god-loyniord/</u>



Nøkur ráð at hugsa um, tá ið tú setur routaran til

- Set beinaran mitt í húsið helst har, ið internetið verður mest brúkt.
- Stendur beinarin í einum enda av húsinum, kunnu tey, ið nýta internetið í hinum endanum, ofta uppliva vánaligt samband og lága ferð.
- Stendur beinarin aftanfyri m

 øblar ella fjaldur í einum skápi, kann hetta órógva ella forða signalinum frá beinaranum.
- Set tí beinaran fram og set hann ovarlaga, so signalið kemur betri út í rúmið. Um beinarin sæst, verður sambandið helst eisini betri.
- Tráðleys tól sum t.d. mikroovnar og barnaalarmar senda eisini EM-bylgjur, ið avlaga signalið frá beinaranum.

1. Far inn á **192.168.178.1**

€ → @ © 122.168.178.1		ų.
FRITZ	FRITZ!Box 7581	
	Welcome to your FRITZIBox	
	Please log in using your pessword. Password	
	Note: The FB(17)Roy user interface is contented with an individual	
	password ex works. This password is printed on the sticker on the underside of your FRITZIBox.	
	Forgot your password? Log In	

2. Loyniorðið til routaran og tær tráðleysu upplýsingarnir finnur tú á einum lepa aftanfyri á routaranum.



3. Um **Setup Wizard** kemur fram, skalt tú velja **Annex A** og trýsta á next. Trýst síðani á **Cancel** og **Exit Wizard** fyri at koma út úr Setup Wizard.

€ → C 0 192.168.178.1				観会
Eptr7:	FRITZ!Box 7581	FRITZINAS	MyFRITZI	:
	Welcome			
	This Woard assists you in configuring your FRIT2IBos. All of the recessary basic settings are performed in just a few steps, You can cancell point in time. If you would like to import settings to your FRIT2IBox that were saved before in and here: Apply Settings This closes the Configuration Wzard. 405 mm / STB mm	the Witard at any time and	d continue configuration . spatible Speedport device Next > (at a later #, click Cancel

4. Trýst á teir 3 prikkarnir ovast í høgra horni



5. Flyt knøttin í **Advanced View** so hann verður grønur – hetta gevur tær fleiri møguleikar at broyta innstillingar.

	>
Log Off	19m 39s
Change Password	
Advanced View	
FRITZ!NAS	
MyFRITZ!	

- 6. Trýst síðani á Internet -> Account Information -> Internet Connection
 - Vel Faroese Telecom í Internet Service Provider
 - Type of Connection
 - Vel Faroese Telecom DSL um tú hevur ADSL ella VDSL
 - Vel Faroese Telecom WAN um tú hevur Fipur hald

7. Trýst á **Apply** fyri at goyma uppsetanina. Trýst á **OK**, tá ið kanningin er liðug fyri at testa internet uppsetanina.

Check the Internet Connection		0
	The Internet connection check was successful.	
		ОК

Tá ið hendan myndin kemur fram hevur tú samband við internetið. Um tú fært ein feil kann tað verða neyðugt at endurstarta beinaran.

Broyt login password

- 1. Trýst á System
- 2. Trýst á FRITZ!Box Users
- 3. Skriva nýtt loyniorð inn í "FRITZ!Box Password" kassan
- 4. Trýst á Apply.

Eptr7	FRITZ!Box 7581 FRITZ!NAS MyFRITZ!
	System > FRITIZIBox Users
	Users Login to the Home Network Apps
Overview	
Internet	Login for Access to the Home Network
S Telephony	Here you specify how to log in to the FRI IZIBox user interface when you are in your home network at home. Login is recommended for reasons of security.
Home Network	O Login with FRITZIBox user name and password
	Login with the FRITZIBox password
'⇔' Wireless	When this option is enabled for the first time or re-enabled, a new Hill/Libox password must be defined. Io view the settings of this Hill/Libox, to change the settings, or to access information, each user has to log in using a shared Hill/Libox password.
L DECT	Hori Zi Box password
🕞 Diagnostics	Note: 3 Access to the FRITZIPar is permitted only if the specified password is entered here. Be sure to keen it in a safe place.
System 1 ^	If you have forgotten the password, you cannot open the user interface again until the factory settings have been restored to the FRITZ!Box. This operation will discard all FRITZ!Box settings.
Event Log	 Login without password (not recommended)
Energy Monitor	
Push Service	Confirm
Dubban and LED.	Before configuring certain settings and functions, such as setting up a call diversion or an IP telephone, you will be prompted to perform an additional action to confirm that you are an authorized user.
Buttons and LEDS	Extra confirmation to configure certain settings and functions
FRITZIBox Users 2	Confirmation options:
Backup	Enter a key sequence on a connected telephone (analog, ISDN or DECT)
Update	Press = buttom on your FRTZIDox the set of the
Region and Language	Enable confirmation via Genete Authenticator ann
🔊 Wizards	Critics commany is a device state of the second secon
	Note:
	You can use the Google Authenticator app only when you access the FRITZIBox from the internet.
	Apply Cancel

- GG! Vit viðmæla altíð at kundar okkara velja eitt nýtt loyniorð til umsiting av beinaranum og eitt nýtt til WiFi(Tráðleyst), heldur enn at brúka tað sum stendur á lepanum á baksíðuni á beinaranum.
- Eitt gott og trygt loyniorð inniheldur: Minst 12 tekin. Smáar og stórar bókstavir. Tøl og sertekin.
- Fleiri góð ráð til loyniorð eru at síggja á <u>https://www.kt-trygd.fo/god-rad/god-loyniord/</u>

Fritz!Box 7581 broyt WIFI

Far inn á Wireless

FritzBox beinarin er uppsettur til at bæði tráðleysu netini, 2.4 GHz og 5GHz, brúka sama navn. Hetta kanst tú broyta, um tú ynskir tað, *men vit mæla til at brúka tað sama fyri 2.4 GHz og 5GHz*.

- 1. Trýst á Radio Network
- 2. Her kanst tú sløkkja/tendra fyri 2.4 GHz netinum og broyta navnið á tí
- 3. Her kanst tú sløkkja/tendra fyri 5 GHz netinum og broyta navnið á tí

Ender 71	FRITZ!Box 7581		FRITZINA	S NyFRITZI	
CHAIL THE C	Wireless > Radio Network				
Overview	Known Wireless LAN Devices				
Internet	The list shows the wireless devices which a	re currently connected with the	e FRITZIBox or which the FRIT	ZIBox knows from previo	us connection
Telephony	Name IP Ad	tiress NAC Address	Data Rate (Mbit(s) Propertie	5	
Home Network					/ >
Wireless	 Sie k invenen alle WLAN-fier ite aus der Ober 	icht entfernen. für die in der Fl	BITZIBox keine individuelle		
Radio Network	Einstellung vorgenommen wurde und die a	ktuell nicht mit der FRITZIBax	verbunden sind.	Entfernen	Refres
Radio Channel	Show unsuccessful registration attempts +				
Security	Participanti				
Schedule	The wireless radio detwork of your FBITZI	los is visible for other wireless	devices and designated with :	name known as the SSI	n
Guest Access	2.4.0Hz framework band	2			-
DECT	Wreless ratio network enabled				
Diagnostics		PROPERTY 78.01 PD			
System	(SSID)	PRINT BOAT JOET HU			
Wizards	NAC address	9C:CT:A6:C7:86:61			
	5-GHz Frequency Band	3			
	Wireless radio network enabled				
	Name of the wireless radio network (SSID)	FRITZ18xx 7581 RD			

Broyt loyniorðið

- 1. Lat prikkin standa í WPA-encryption (highest security) fyri at hava loyniorð á tykkara tráðleysa netið.
- Fyri at broyta loyniorðið skulu tit bert skriva eitt nýtt í tegin Network key og trýsta á Apply niðast á síðuni.
 GG! Vit viðmæla altíð at kundar okkara velja eitt nýtt loyniorð til umsiting av beinaranum og eitt nýtt til WiFi(Tráðleyst), heldur enn at brúka tað sum stendur á lepanum á baksíðuni á beinaranum.
- Eitt gott og trygt loyniorð inniheldur: Minst 12 tekin. Smáar og stórar bókstavir. Tøl og sertekin.
- Fleiri góð ráð til loyniorð eru at síggja á <u>https://www.kt-trygd.fo/god-rad/god-loyniord/</u>

EptrZ:	FRITZ!Box 7581	FRITZINAS MYFRITZI É
	Wireless > Security	0
	Encryption WPS Quick Connection	
Overview Internet Telephony Home Network	Specify here how your wireless radio network should be secured a # WPA encryption (highest security) O non-encrypted (not recommended, unprotected)	pinst unauthorized use and monitoring,
중 Wireless ^	WPA Encryption	
Radio Network	Define a network key. This network key is used to secure wireless L	AN connections. The network key must be between 8 and 63 characters in
Radio Channel Security Schedule	length. WPA mode WPA2 (CCMP) • Network key 02112279991539376113	

Broyt kanalina

Trýst á Radio Channel

- 1. Her hevur tú møguleika at broyta kanalina, ið beinarin hjá tær brúkar
- 2. Lat prikkin standa í hesum, um tú vilt hava at beinarin sjálvur skal velja kanalina.
- 3. Set prikkin í **Adjust radio channel settings** um tú sjálv/ur vilt velja kanalina fyri 2.4Ghz og 5Ghz neti.

Vit viðmæla at man letur beinaran velja kanal sjálvvirkand.

Entr71	FRITZ!Box 7581	FRITZINAS My	(FRITZI 🚦
CHAILE.	Wireless) Radio Channel		(7)
Overview Internet	For optimum configuration of the wireless network, the FRITZ/Box checks the wirele situation.	ss environment and uses the be	st radio settings for the given
S Telephony	Radio Channel Settings		
🕞 Home Network	Set ratio channel settings automatically (recommended)		
🕾 Wireless 🧳	Mineless channel in the 2.4-GHz Muto channel *		
Radio Network	frequency band		
Radio Channel	Wireless channel in the 5-GHz Auto channel *		
Security	Additional settings *		
Schedule			

Niðast á somu síðu sært tú tvey yvirlit yvir aðrar beinarar í nærumhvørvinum og hvørjari kanal teir senda á. Hetta kann hjálpa tær við at velja eina kanal, ið ikki hevur ov nógvar signal órógvingar.

Her hevur tú yvirliti á 2.4 GHz og 5GHz bandinum. Grøna linjan vísir hvørja kanal tín beinari brúkar, meðan tann bláa vísir hvørjar kanalir aðrir beinarir nýta.



Her sært tú yvirlit yvir tráðleys net í nærumhvørvinum og júst hvørjari kanal hvørt net koyrir á.

Soleiðis fáa tíni tól tráðleyst samband

Windows 7/8/10

Trýst á ta tráðleysu ímyndina niðast í høgra horni og vel títt tráðleysa net. Skriva tað tráðleysa loyniorðið inn og trýst á **Opret**.

Mac

Trýst á ta tráðleysu ímyndina ovast í høgra horni á skerminum og vel títt tráðleysa net. Skriva tað tráðleysa loyniorðið inn og trýst á **Opret forbindelse**.





iPhone/iPad

Far inn á **Indstillinger** og trýst á**WiFi**. Vel títt tráðleysa net og skriva loyniorðið inn.

Android

Far inn a **Indstillinger og trýst á WIFI**. Vel títt tráðleysa net, og skriva loyniorðið inn og trýst á **Opret**.



